




DIRECTION FOR USE

使用说明

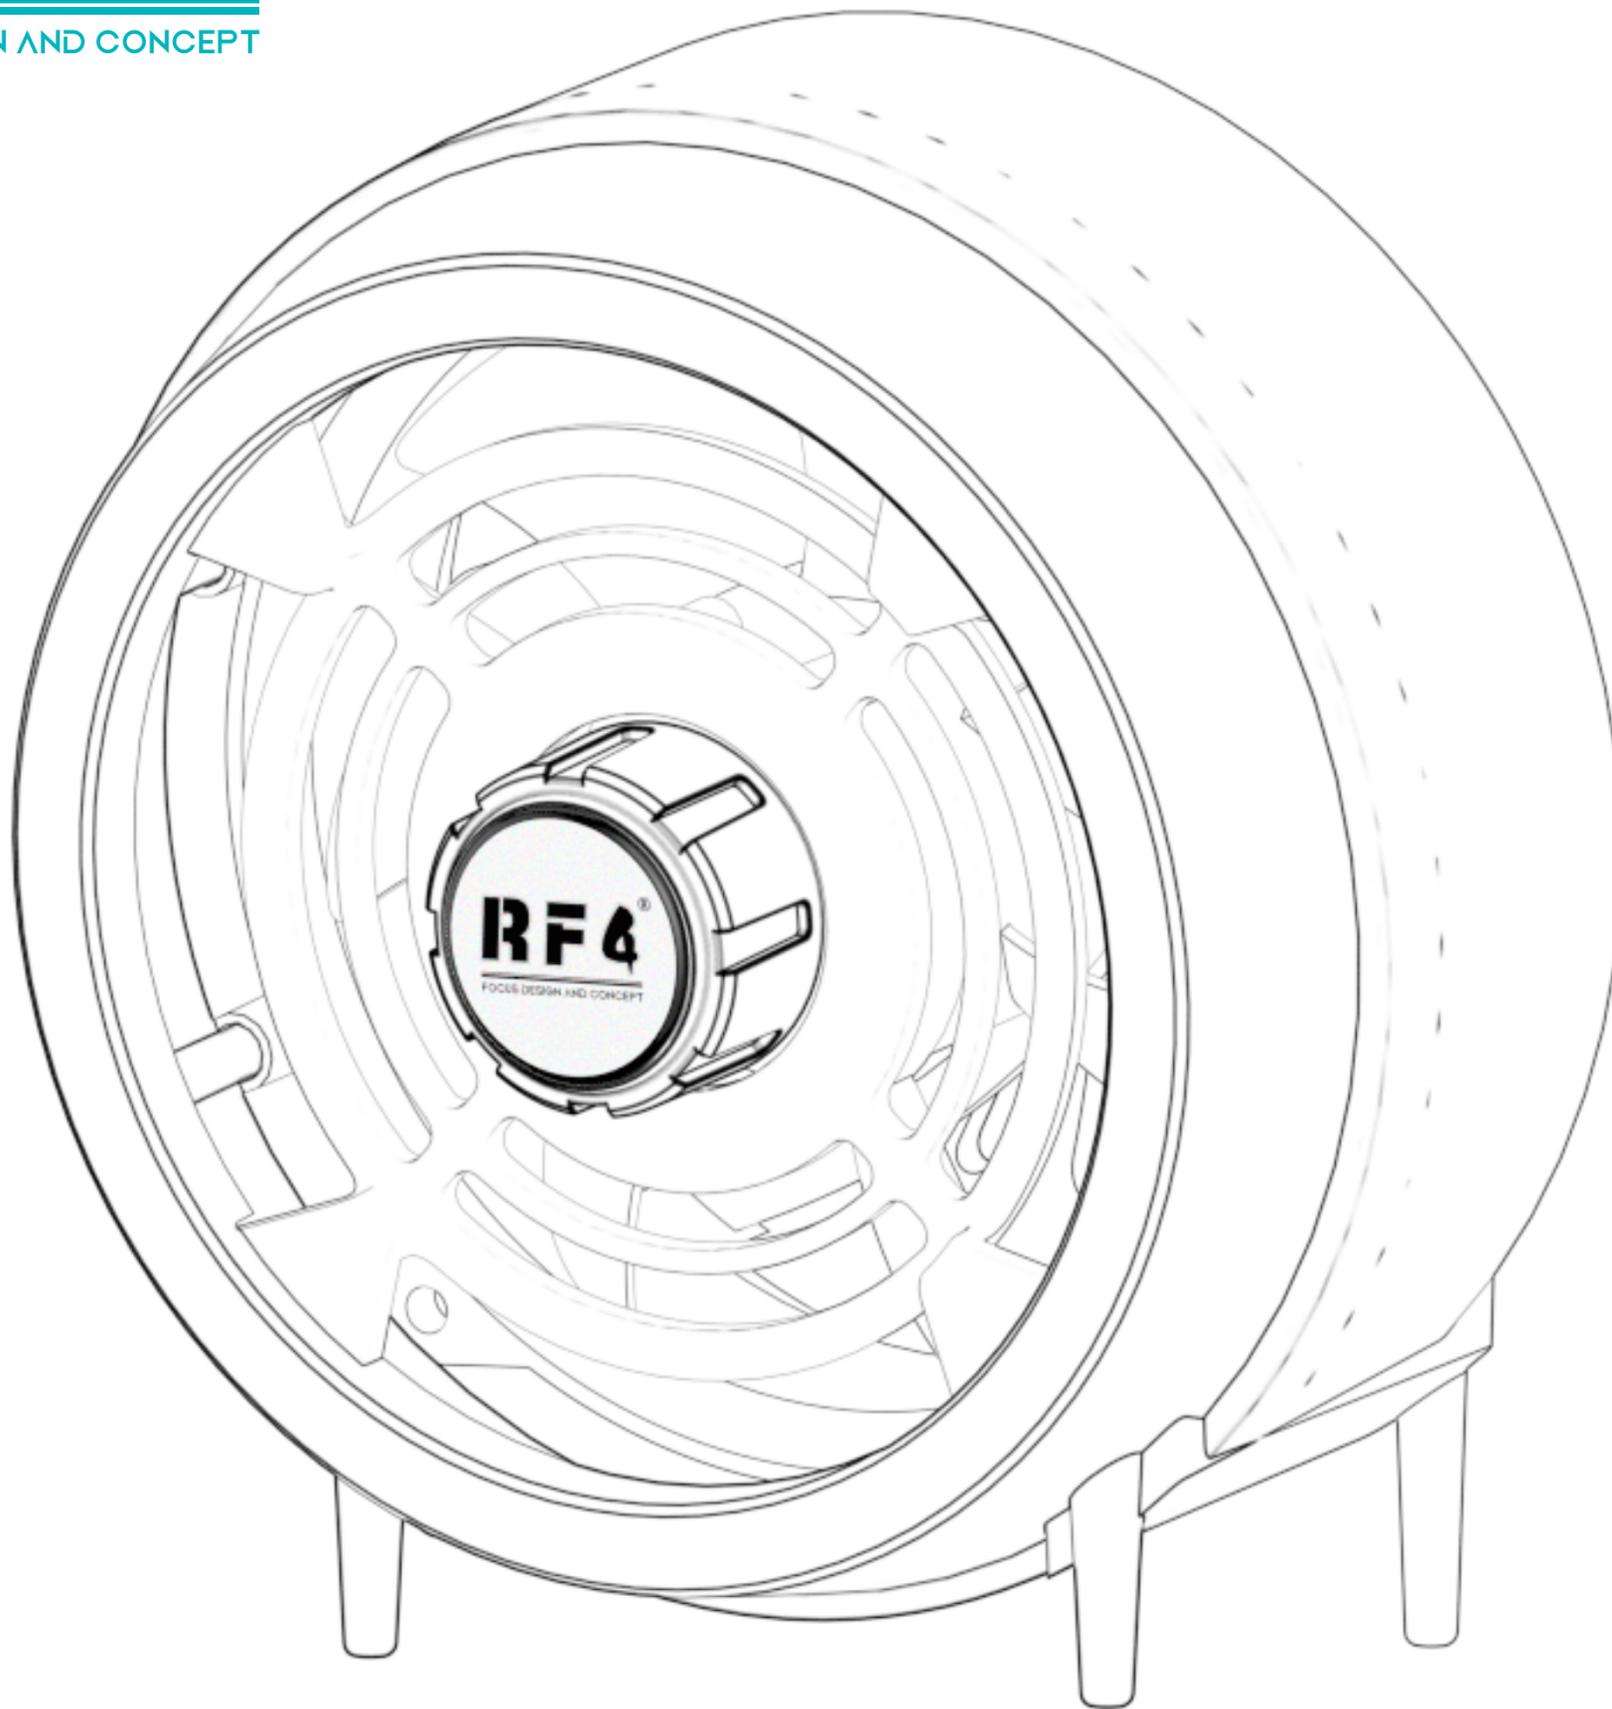

SF4 directional smoke extraction fan


SF4 定向抽烟雾风扇

产品参数

电压	电流	功率	最高转速
5V	1A	5W	5000RPM


操作说明

01

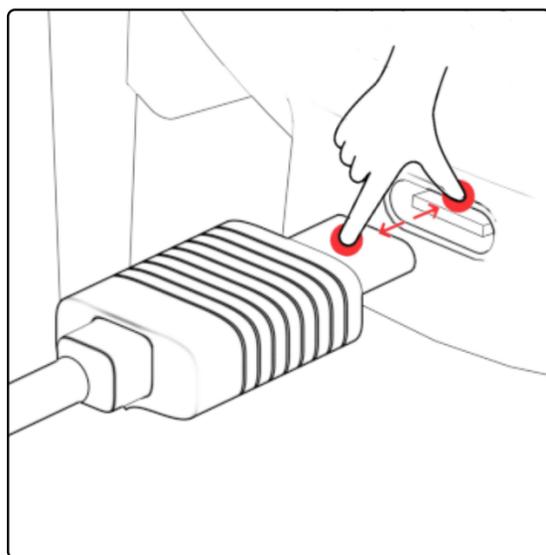


将type-c电源线接入风扇

02

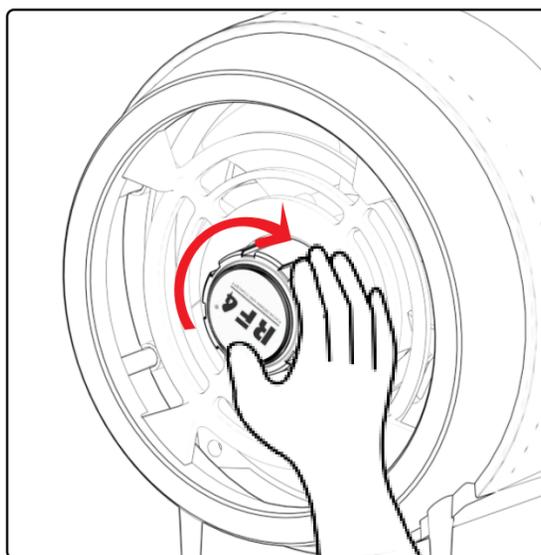

转动旋钮启动风扇


03

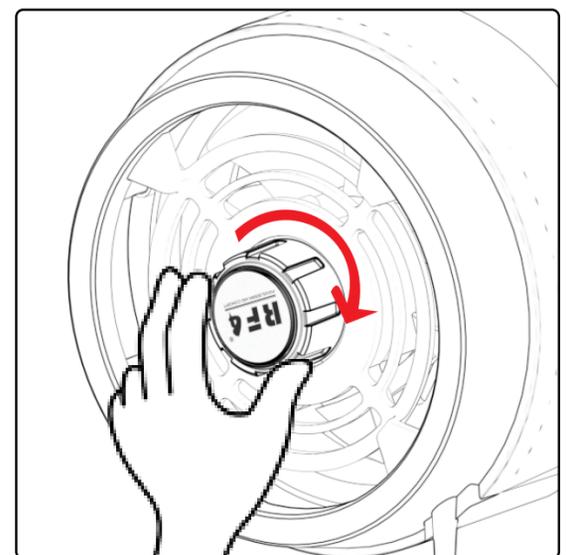



继续转动旋钮调至所需转速

功能说明


警告：本产品严禁接入超功率电源，以免损坏产品。

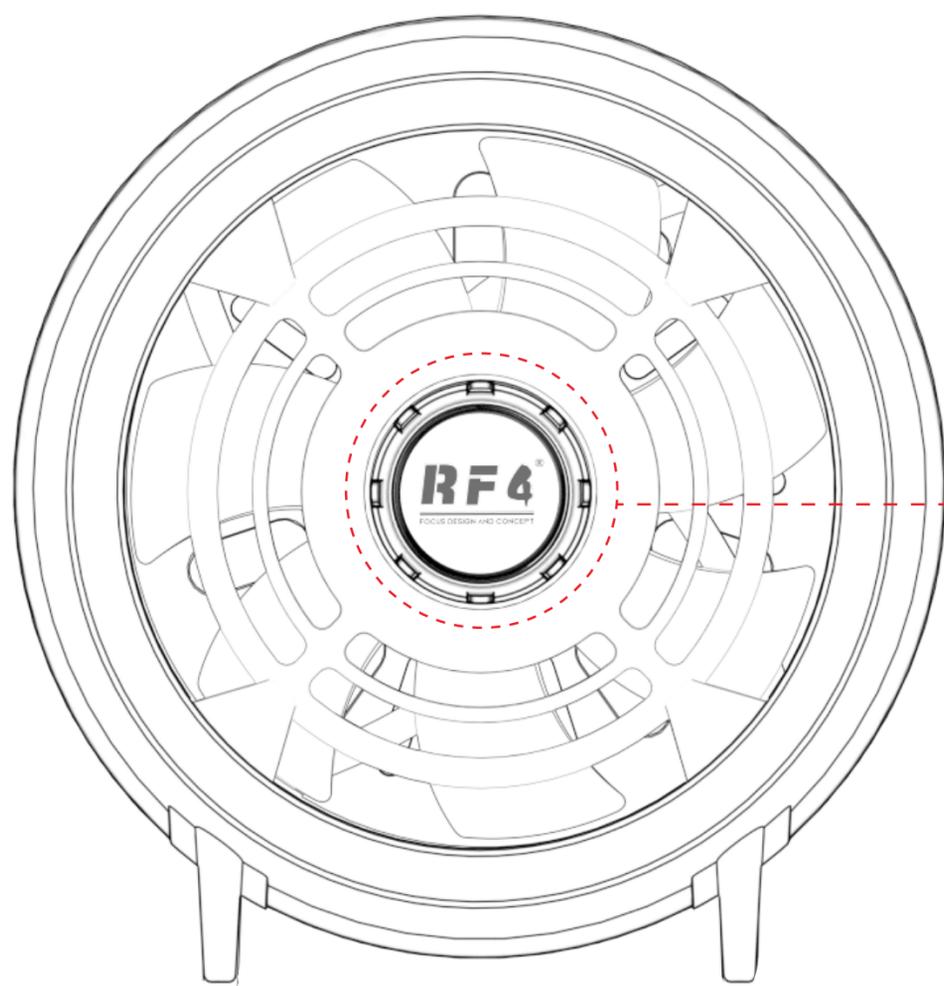


转速调节旋钮

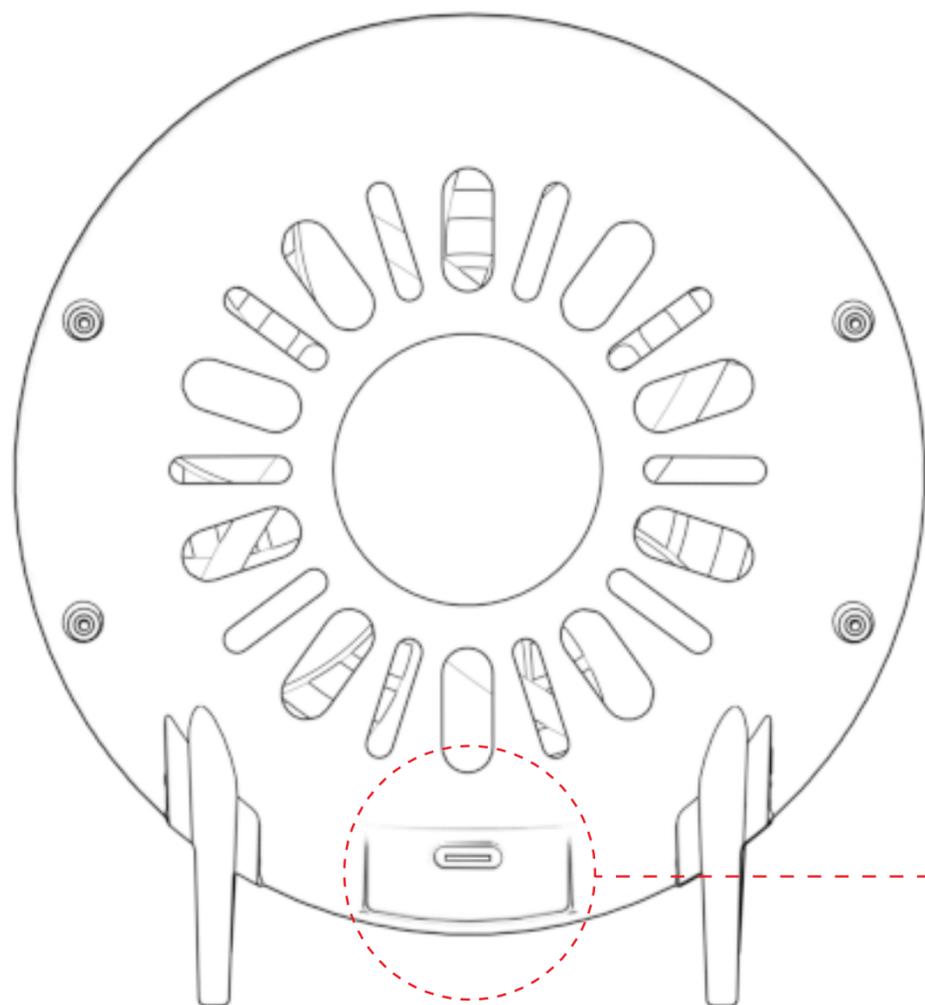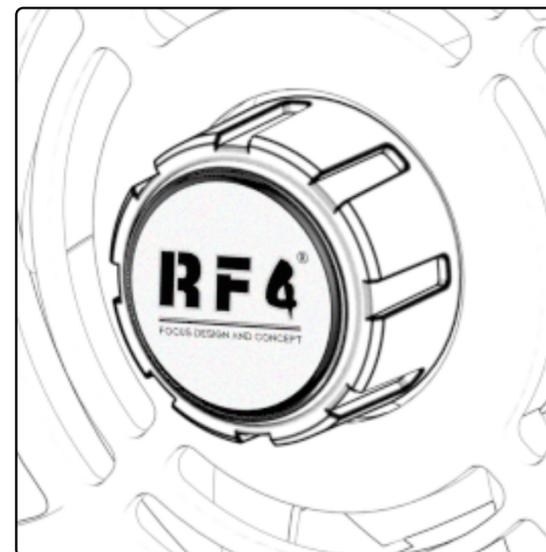

电源输入接口

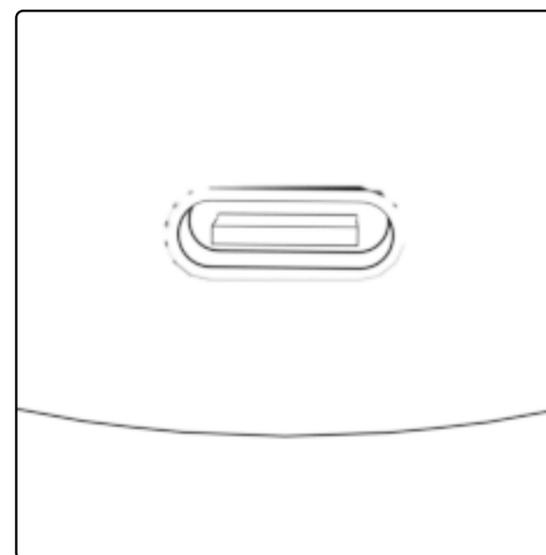

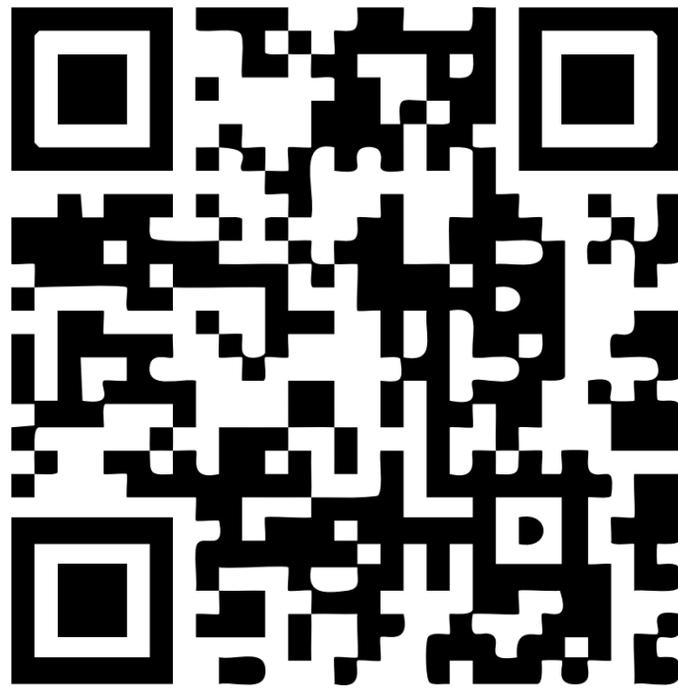

扫一扫了解更多

Guangzhou KSL Electronic Technology Co., LTD

ADD 26F, Yinghao Building, No. 470 Dongjiao North Liwan District,
Guangzhou City, Guangdong Province, China

TEL 400-001-8044

POSTCODE 510370

WEBSITE <https://www.rf4tools.com>

广州市快速立电子科技有限公司

地址 广东省广州市荔湾区东漵北路470号盈昊大厦26楼

电话 400-001-8044


邮编 510370

网址 <https://www.rf4tools.com>



DIRECTION FOR USE

使用说明

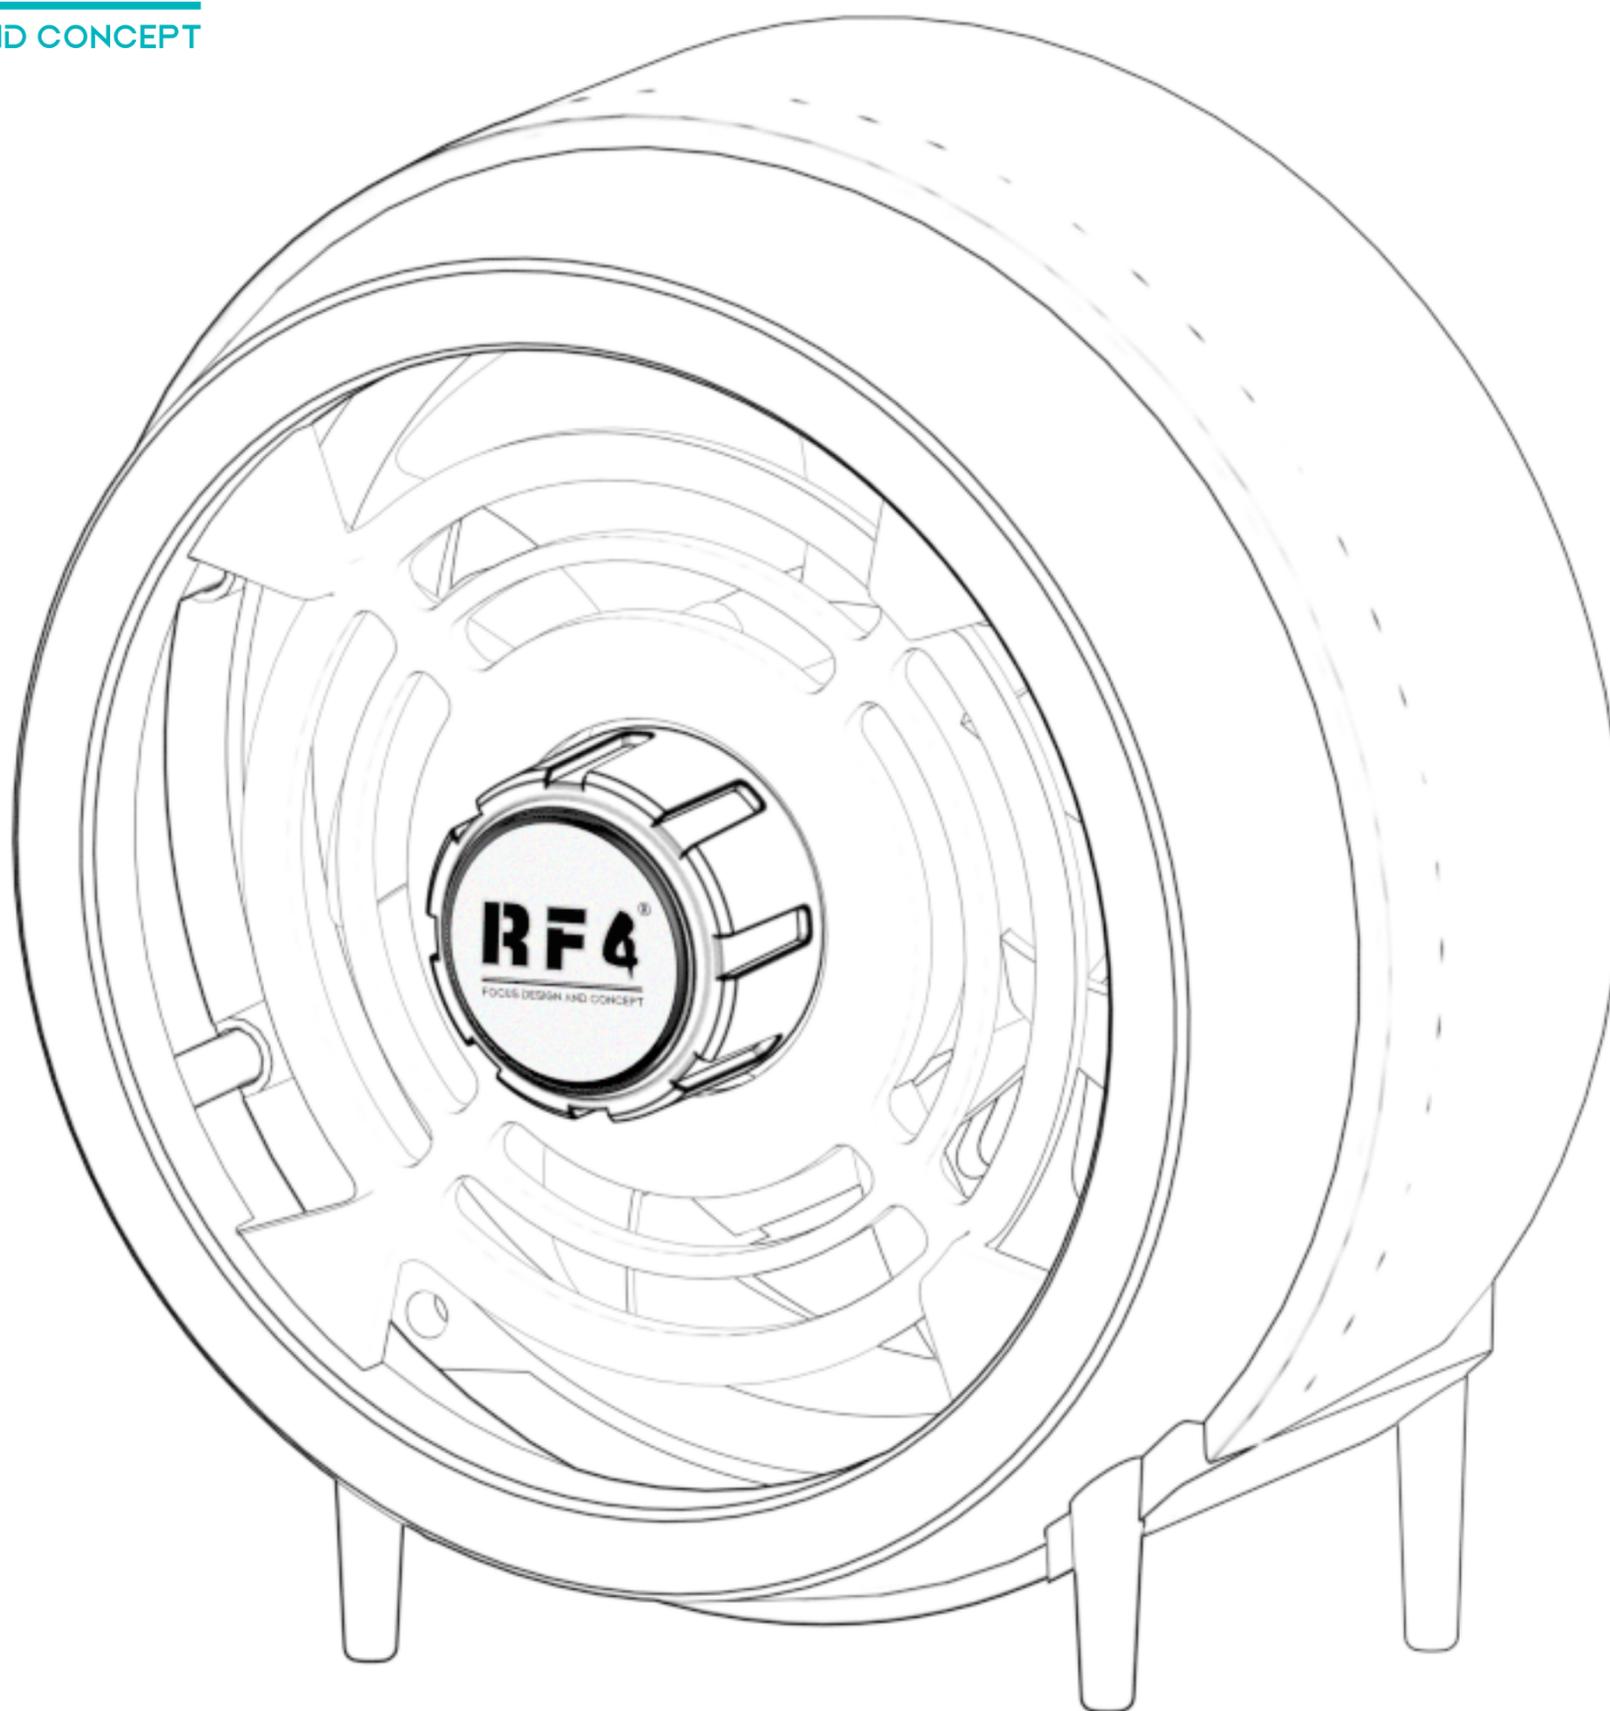


SF4 directional smoke extraction fan


SF4 定向抽烟雾风扇

Function Description


WARNING: THIS PRODUCT MUST NOT BE CONNECTED TO A POWER SOURCE WITH AN EXCESSIVE WATTAGE TO PREVENT DAMAGE TO THE PRODUCT.

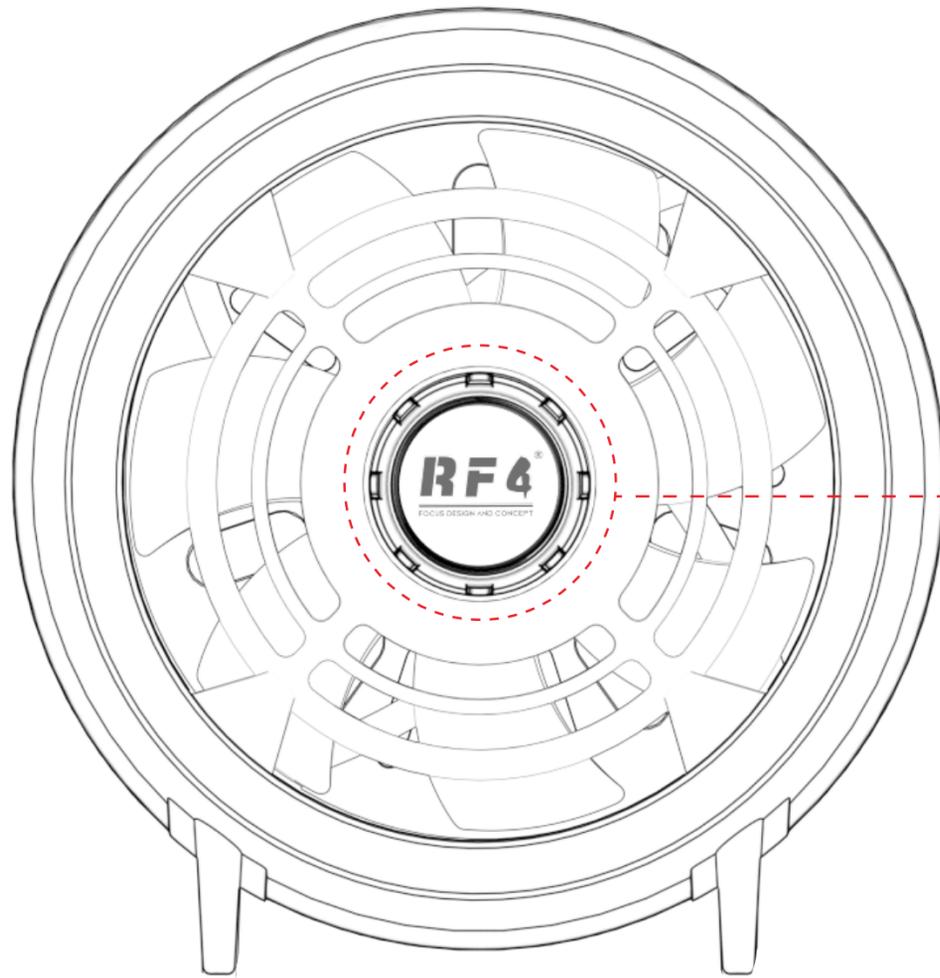

Speed Regulation Knob

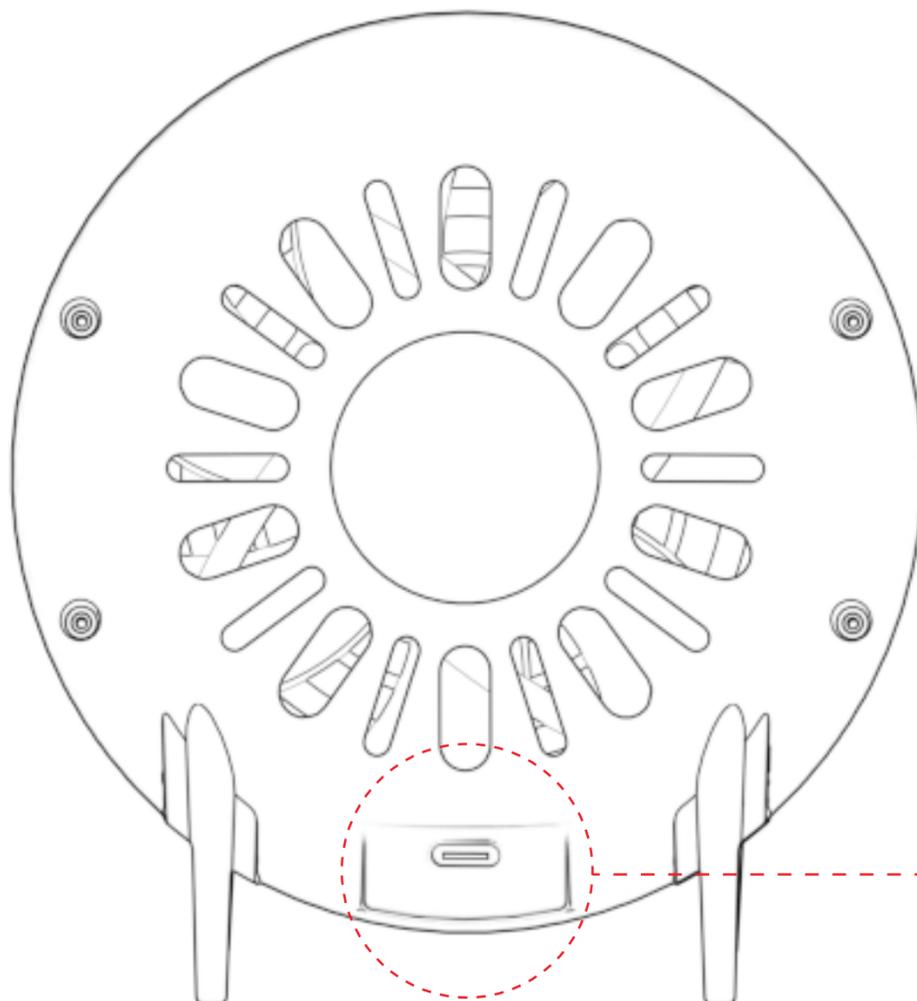

Power Input Interface

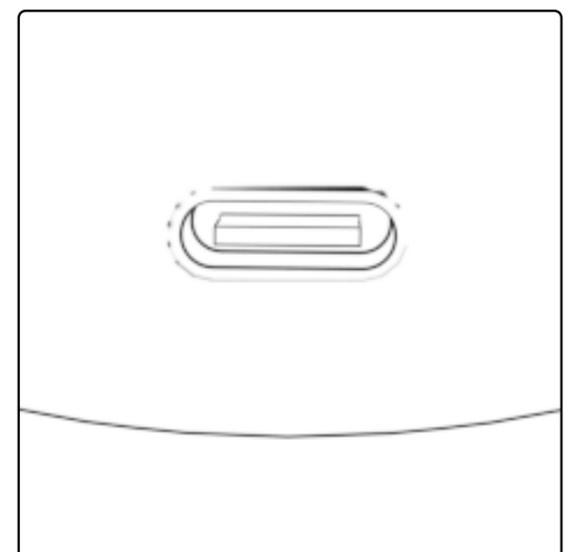


PRODUCT PARAMETERS

Voltage	Current	Power	Maximum Speed
5 V	1 A	5 W	5000RPM


Operation Instructions

01

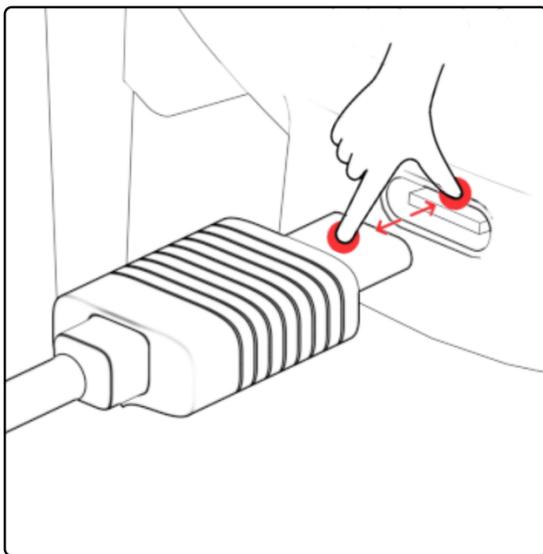


Connect the Type-C power cable to the fan

02

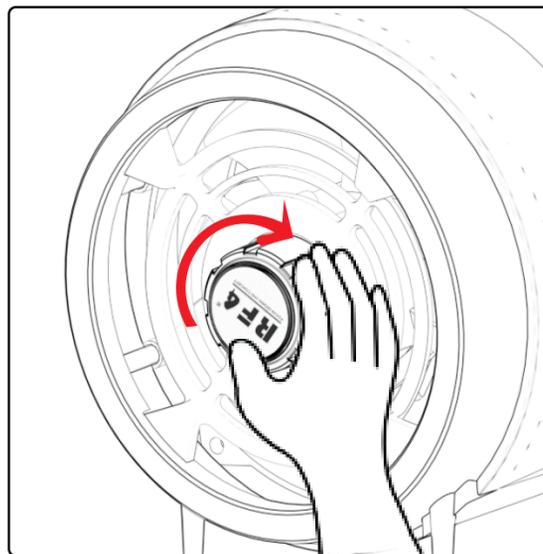


Turn the knob to start

03

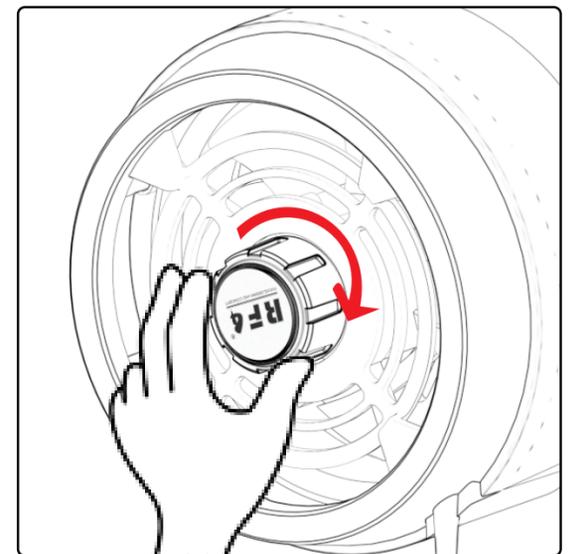

Continue turning the knob to adjust to the desired speed.

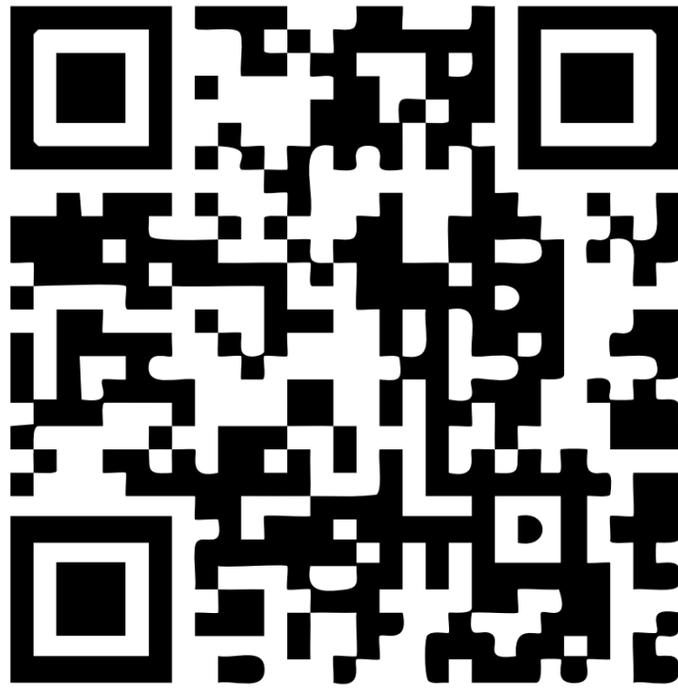

Scan the code to learn more

Guangzhou KSL Electronic Technology Co., LTD

ADD 26F, Yinghao Building, No. 470 Dongjiao North Liwan District,
Guangzhou City, Guangdong Province, China

TEL 400-001-8044

POSTCODE 510370

WEBSITE <https://www.rf4tools.com>

广州市快速立电子科技有限公司

地址 广东省广州市荔湾区东漵北路470号盈昊大厦26楼

电话 400-001-8044

邮编 510370

网址 <https://www.rf4tools.com>